

1	1J7-12111-00-00	VALVE, intake	3
2	1J7-12121-00-00	VALVE, exhaust	3
3	1J7-12119-01-00	SEAL, valve stem oil	6
4	1J7-12116-00-00	SEAT, valve spring	6
5	90501-39414-00	SPRING, outer	6
6	90501-28415-00	SPRING, inner	6
7	2F3-12117-00-00	RETAINER, valve spring	6
8	1J7-12118-00-00	LOCK, valve spring retainer	12
9	1J7-12153-00-00	LIFTER, valve	6




PART NUMBER	DESCRIPTION
90890-91043-10	SEAT CUTTER SET VALVE
90890-01245-00	VALVE ADJUSTING TOOL
90890-01225-00	VALVE GUIDE REMOVER
90890-01226-00	VALVE GUIDE INSTALLER
90890-01227-00	VALVE GUIDE REAMER

REF. NO.	PART NUMBER	DESCRIPTION
1	90890-01253-00	VALVE SPRING COMPRESSOR
2	90630-01243-00	VALVE SPRING COMP. ATTACHMENT

Valve Clearance (cold) Intake/Exhaust

0.16 ~ 0.20mm / 0.21 ~ 0.25mm

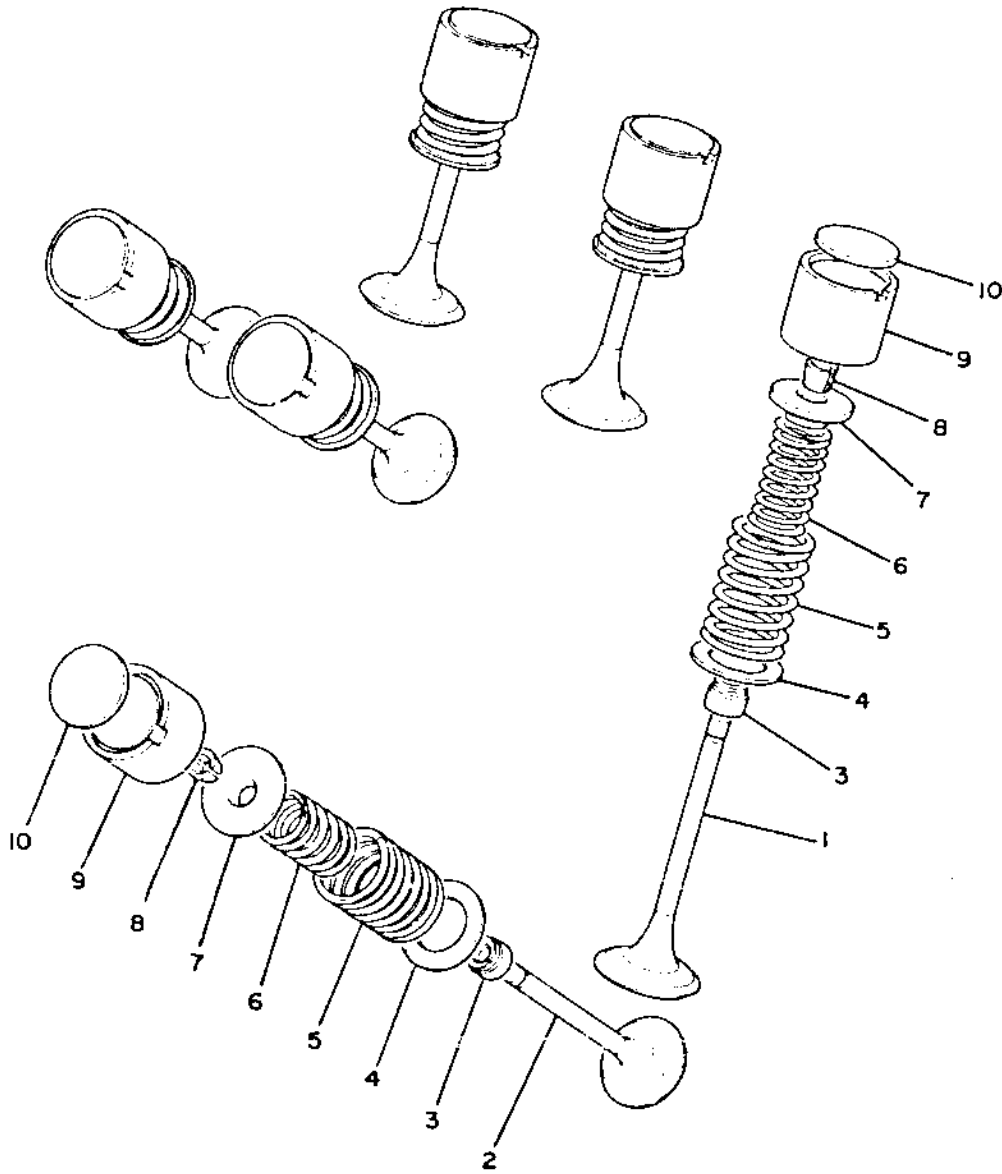

10	1J7-12169-01-00	PAD, adjusting (2.00).....
	1J7-12169-11-00	PAD, adjusting (2.05).....
	1J7-12169-21-00	PAD, adjusting (2.10).....
	1J7-12169-31-00	PAD, adjusting (2.15).....
	1J7-12169-41-00	PAD, adjusting (2.20).....
	1J7-12169-51-00	PAD, adjusting (2.25).....
	1J7-12169-61-00	PAD, adjusting (2.30).....
	1J7-12169-71-00	PAD, adjusting (2.35).....
	1J7-12169-81-00	PAD, adjusting (2.40).....
	1J7-12169-91-00	PAD, adjusting (2.45).....
	1J7-12169-A1-00	PAD, adjusting (2.50).....
	1J7-12169-E1-00	PAD, adjusting (2.55).....
	1J7-12169-F1-00	PAD, adjusting (2.50).....
	1J7-12169-G1-00	PAD, adjusting (2.65).....
	1J7-12169-H1-00	PAD, adjusting (2.70).....
	1J7-12169-J1-00	PAD, adjusting (2.75).....
	1J7-12169-K1-00	PAD, adjusting (2.80).....
	1J7-12169-L1-00	PAD, adjusting (2.85).....
	1J7-12169-M1-00	PAD, adjusting (2.90).....
	1J7-12169-N1-00	PAD, adjusting (2.95).....
	1J7-12169-R1-00	PAD, adjusting (3.00).....
	1J7-12169-T1-00	PAD, adjusting (3.05).....
	1J7-12169-U1-00	PAD, adjusting (3.10).....
	1J7-12169-V1-00	PAD, adjusting (3.15).....
	1J7-12169-W1-00	PAD, adjusting (3.20).....