


No.	Number	Description	Qty.
1	2H8-W2533-00-00	CAST WHEEL rear (2.50-17) ...	1
2	2H7-25317-00-00	SPACER, bearing.....	1
3	93313-62010-00	BEARING, cylindrical	1
4	93306-30404-00	BEARING (B6304Z).....	1
5	93210-41358-00	O-RING	1
6	93210-58144-00	O-RING	1
7	93102-25045-00	OIL SEAL	1
8	93104-27026-00	OIL SEAL	1
9	90387-20741-00	COLLAR	1
10	3J3-25319-00-00	SEAL, hub dust	1
11	2H7-25366-00-00	CLUTCH, hub.....	1
12	90109-10491-00	BOLT	6
13	95380-10600-00	NUT.....	6
14	92903-10100-00	WASHER, spring (92901-10100)	6
15	90201-10124-00	WASHER, plate.....	6
16	93420-52014-00	CIRCLIP	1
17	2H7-25315-00-00	FLANGE, spacer	1
18	1J7-25377-00-00	COLLAR, wheel.....	1
19	1J7-25367-00-00	COVER, hub dust	1
20	94145-17552-00	TIRE (4.50-17).....	1

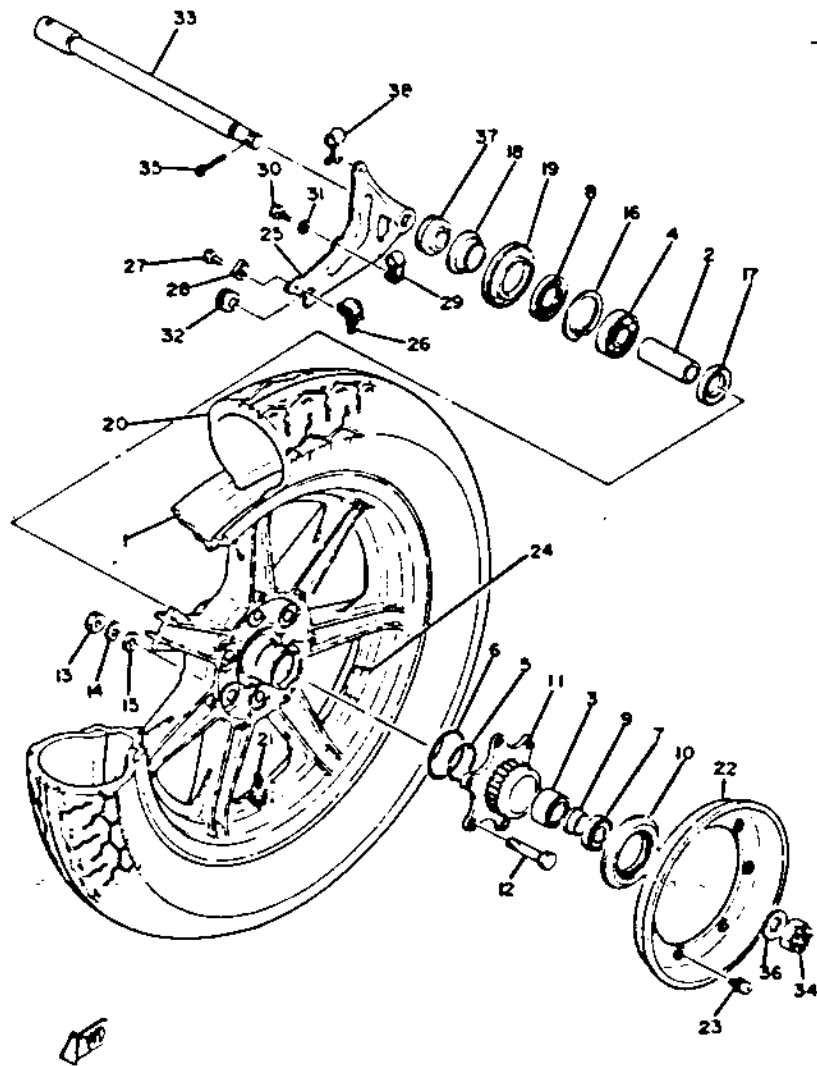

Ref. No.	Part Number	Description	Qty.
21	93900-00001-00	VALVE, rim.....	1
22	2H7-25327-00-00	COVER, plate.....	1
23	90159-05018-00	SCREW, with washer.....	4
24	1A1-25398-01-00	BALANCER, wheel (20G).....	1
	1A1-25399-00-00	BALANCER, wheel (10G).....	1
	2M0-25399-00-00	BALANCER, wheel (30G).....	1
25	3J3-25371-01-00	PLATE, torque stopper.....	1
26	90461-08051-00	CLAMP.....	1
27	97306-06012-00	BOLT.....	1
28	90215-06128-00	WASHER, lock.....	1
29	90461-08052-00	CLAMP.....	1
30	97306-06014-00	BOLT.....	1
31	92906-06100-00	WASHER, spring.....	1
32	3H3-25374-00-00	SPACER, torque stopper.....	1
33	3J3-25381-00-00	AXLE, wheel.....	1
34	90171-18008-00	NUT, castle.....	1
35	91401-40040-00	PIN, cotter (91401-40035).....	1
36	90201-18620-00	WASHER, plate.....	1
37	90387-20740-00	COLLAR.....	1
38	90461-12053-00	CLAMP.....	1